


Standard System NV 800

Recommended application: new buildings up to approx. 15 apartments, call differentiation is possible

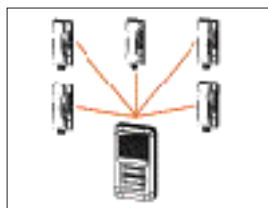

System description

Entryphone system: Speech between Door station and Entryphone, Door opener function possible.

Main Door signal: AC-buzzer

Flat Door signal : AC-buzzer or differentiation through use of ZGO-04 (HT 9701) or ZGO-03 (HT 8801/..02)

Entryphone Type: HT 9701, HT 9702, HT 8801, HT 8802

Loudspeaker/Mic.: TLM 500, ETL 290



Power-supply / Amplifier **NV 800** Standard system (VDE)

in standard housing, with adjustable AF-Amplifier for bi-directional speech communication, Mute-circuit and all supply voltages for Signaling and Door opener function.

Technical Data: 230 V AC \pm 10%, 50/60 Hz, 8/12 V AC 1A, 10 V DC 0,3 A
106 x 90 x 60 mm, 6,5 TE, for 35 mm Norm-rail or wall mounting

Order-No.:

88 41 00



Entryphone **HT 9701**

With Electret-Microphone, Loudspeaker-reciever capsule, AC-buzzer, Door opener button, additional button for special applications, extendable with a 3-Tone electronic Gong (ZGO-04) for call differentiation. Simple Installation through the use of a mounting plate. The Entryphone must only be opened, when using some additional modules, also for table use with optional table mounting set ZTM 97/16.

colour


Order-No.:

white

88 51 40

brown

88 51 41

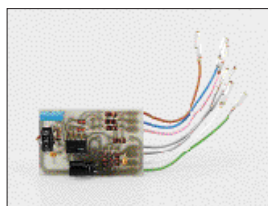

3-Tone electronic Gong **ZGO-04** with three various ringing tones for call differentiation. The Gong has Optionally a 1-Tone, 2-Tone or 3-Tone Gong and can be used for the Main Door or Flat Door call. The Gong is mounted in the HT 9701 housing. The volume is adjustable and the loudspeaker TRÜ 80 is included. For Entryphone type: HT 9701, HT 9702 and HT 9706

Order-No.:

88 53 25

3-Tone electronic Gong **ZGO-03** (for Entryphone type: HT 8801, HT 8802, HT 8806)

The Gong can be used for the Main- or Flat Door call and fits in the Entryphone housing. Adjustable Tone and volume, including the loudspeaker TRÜ 70.

88 52 30



Table mounting set **ZTM 97/16**

Enables the table use of the Entryphone.

including: 16-core connection cable (flexible, black, approx. 2 m / Length)
4 rubber feet (insertion) and cable security.

For Entryphone type: HT 9701, HT 9702, HT 9706, HT 9707 and BHT 9800

Plugs and sockets on request.

Order-No.:

88 53 24

Alphatone-Generator **ZER-02** (for Entryphone type: HT 8801, HT 8802, HT 8806 and HT 8807)

The ZER-02 Module can be used instead of the AC-buzzer or additionally for call differentiation.

When an 8-12 V AC Voltage is applied over a button, the Alphatone will be activated.

Adjustable volume, including the loudspeaker TRÜ 70.

88 52 30



Door switch-over controller **TU 102**

In standard housing, enables the connection of 2 Door stations, Speech and Door opener functions are automatically switched to the appropriate ringing Door station.

Up to max. 4 Door stations can be cascaded and controlled through the use of 2 Door switch-over units.

Usable with Systems: NV 800, NV 801, NV 806, NV 810

Order-No.:

88 42 00